

THE “SOLAR”

INSTRUCTIONS & MAINTENANCE GUIDE

HOW TO GET THE MOST OUT OF YOUR BOLLARD

- 1) REVERSE IN.** We recommend that you reverse in to your car space as you are less likely to come into contact with the bollard at any time. If you drive in forwards to your car space however, the risk of hitting your bollard is greater and over time, may affect the operation of your bollard. Warranty does not cover damage to the bollard.
- 2) CLOSE THE REMOTE CONTROL SLIDER WHEN NOT IN USE.** Each time you push the button for operation, ensure you push up the slider. This will cover the buttons and prevent you from accidentally pressing the buttons, which may activate and cause damage to your bollard.
- 3) EMERGENCY OPERATION.** If you need to manually operate your bollard (i.e. if your battery runs out); pull up on the bollard **SLOWLY** to the minimum height where you can remove the battery. You will be able to push down the bollard.
- 4) CHARGE YOUR BATTERY.** We recommend removing the battery from your bollard, and charge utilising the wall charger provided, every 12 months, to top up the solar function
- 5) WIPE DOWN YOUR SOLAR PANEL.** We recommend giving your solar panel a quick wipe down (with a damp cloth followed by a dry cloth) every few months to avoid build-up of debris.



What's included?



- 1: Battery Wall Charger
- 2: Remote Controls (x2)
- 3: Keys (x2)

How do I use my bollard?



Point your remote control in the direction of your bollard and press the left “lock” button to raise your bollard into the upright position

Point your remote control in the direction of your bollard and press the right “unlock” button to lower your bollard to park

Your remote control can work from up to a distance of 15 metres away

Remember to slide the cover over the buttons to protect them from accidentally being pushed

If the indicator light is not coming on; you may need to change the remote control batteries (unscrew remote control and replace 1 x A27 battery)

How do I charge the battery?



To remove your bollard battery for charging, you must follow these simple steps (as pictured):

Step 1: Raise the bollard in the upright position

Step 2: Use your key into the lock at the back of the unit and turn clockwise to loosen

Step 3: Remove lid from bollard and set aside

Step 4: Unplug the battery from the bollard's cable as well as the solar panel

Step 5: Plug the battery into your Wall Charger and plug into a powerpoint. You can plug in either cable from the battery.

We recommend that you charge your battery for approximately 6 hours. For safety, do not leave the battery charging unattended overnight.

Once charged, follow the above steps in reverse.

Additional Bollard Batteries, Remote Controls, Remote Control Batteries and Wall Chargers may be purchased; please contact us for details or you may purchase through our website.

If you need any help or have any questions, please contact us.

info@seurespot.com.au | www.seurespot.com.au | 1300 583 231 |