



REMOTE CONTROL PROGRAMMING GUIDE STATEMENT & SOLAR BOLLARDS

Before you start, remember to have ALL remote controls for this bollard, and ensure the indicator light is working on all of them.

STEP ONE

Remove the base cover by using your key. Keep the battery connected.

STEP TWO

Unscrew the plastic panel to expose the white circuit board box.

STEP THREE

Peel back / cut the tape to open the box to expose the circuit board.

STEP FOUR

Press and hold the little black or white button on the circuit board until the indicator light of your bollard stops flashing (see picture).

THE CIRCUIT BOARD HAS NOW BEEN RESET

STEP FIVE

Press and hold any button on your remote control AND **press and hold** the little black or white button on the circuit board **at the same time**.

YOUR REMOTE CONTROL IS NOW PROGRAMMED.

Repeat STEP FIVE for all remaining remote controls, then repeat Steps 1 - 3 in reverse.


REMOTE CONTROL INDICATOR



CIRCUIT BOARD BOX



BLACK OR WHITE RESET BUTTON

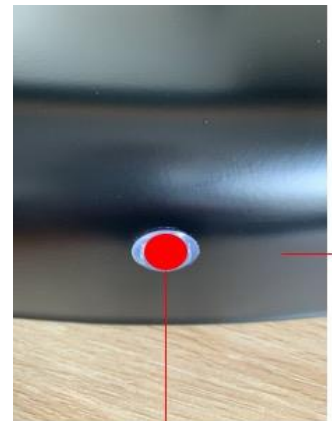

BOLLARD BASE

BOLLARD INDICATOR

Additional Remote Controls are available for purchase through our website

www.securespot.com.au/online-store/

For further assistance, please contact us on 1300 583 231 and our friendly staff will be happy to talk you through the process.